Vitantonio®

User Manual

Household Use Only

Warranty Registration

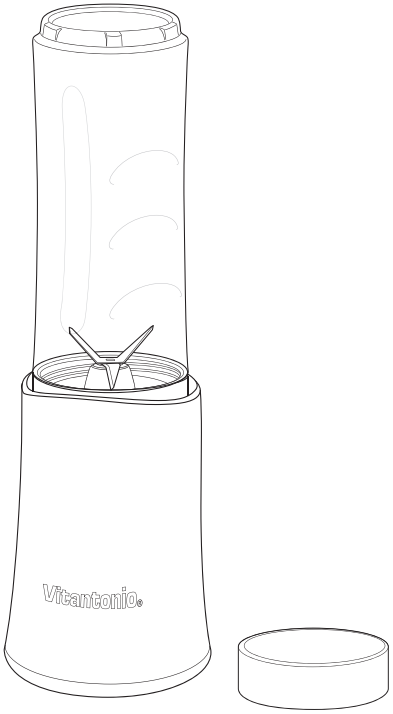

Vitantonio
Mini Bottle Blender

VBL-3

READ CAREFULLY BEFORE USE

Thank you for your purchase of Vitantonio Mini Bottle Blender. Please read this user manual carefully before first time use and keep it for future reference.

Warranty registration is inside this manual.

Contents

Important Safeguards	1
Blender Parts	5
Using the Blender	7
Care and Cleaning	10
Troubleshooting	12
Warranty Services	13
Terms and Conditions	14
Warranty Registration	Last

USE IN 220-240V ONLY.
WARRANTY SERVICES LIMITED TO HONG KONG AND MACAU ONLY.

Important Safeguards

- Please read this Important Safeguards carefully before you use the blender and keep it well for future reference.
- Please read all instructions before use.

WARNING	Could result in death or serious injury.	**CAUTION**	Could result in injury or damage in property.

- Potential property damages include: furniture, pets, body damage.
- Please note the below signs for necessary actions in using the product.

	Prohibited actions		**Required actions**

** Please read this manual in quiet area and keep it well for future reference.

WARNING

- Never attempt to repair or disassemble the motor base.
- Never immerse the motor base, cord, plug in water or any liquid.
- If the mains cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or other parts are damaged or not functioning properly.
- Do not twist, pull or abuse the mains cord.
- Do not leave the mains cord within the reach of children, close to or in contact with the hot parts of your appliance, close to a heat source or a sharp edge, or in contact with the blades.
- Do not plug into mains voltage other than 220-240v. Warranty will be void if product is damaged plugging into the wrong mains.
- Handle the blades with extreme care during cleaning and this could result in injury. The cutting blades are very sharp and could cut your fingers.

Important Safeguards

CAUTION

- Do not use for commercial purposes. Any inappropriate use or failure to comply with the instruction, the manufacturer would not accept responsiblity and warranty is void.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unelss they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Never use unauthorized accessories that are not supplied by Vitantonio or the local agent.
- Do not leave the appliance run unattended.

- Check if the voltage indicated on the appliance (220-240V) corresponds to the local mains voltage before you connect the appliances.
- Always unplug the appliance when not in use or before cleaning.
- Always unplug the appliance before you assemble, disassemble or move the blenders or accessories.
- Always unplug the appliance if the blades get stuck.
- Always place the appliance on a flat and stable work surface. Do not move the apliance during operation.

Important Safeguards

WARNING - BLENDERS

- Do not blend non-food items. Do not use blenders to blend hard food like bones as this could damage the blades.
- Do not put in hot ingredients over 40°C.
- Always fasten the blade unit into the bottle properly before blending.
- To reduce the risk of injury, never place the blade unit on base without the bottle securely fastened.
- Do not exceed the maximum level indicated on bottle.
- Do not use the appliances for prolonged period of time.
- Do not put the bottle, blade unit, lid, motor base and any of the parts in a microwave oven.

Important Safeguards

VBL-3 Mini Bottle Blender is designed to blend smoothie and juice. It is suitable for blending solid together with liquid food ingredients. However it is not meant for fine chopping or slicing.
Do not use this appliance to blend non-food items.

Non-Recommended Ingredients	
Rock ice	This is not an ice crusher and it is not supposed to crush ice without water or juice. (Recommended ice size is 2cm or around 30g)
Meat / Fish	It is not meant for chopping or grinding meat or fish.
Bread Dough Egg White	Do not use the blender to beat egg white and kneading bread dough.

Ingredients to Blend with Water / Juice	
Sticky Ingredients	Examples: red beans and boiled potatos.
Dry Ingredients	Examples: cheese, dry seaweed, jinseng, sesame, coffee beans, almond

⚠ CAUTION

Overloading the blender could activate the protection device to stop the appliance. If this happens, stop blending and follow the below procedures.

1. Unplug from the mains.
2. Let it cool down for 30 minutes, then you may blend again.

Blender Parts

** Please wash before using for the first time (Page 10-11)

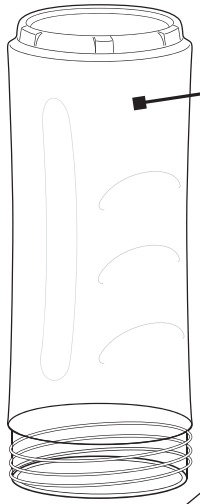

Bottle

Made by Tritan™ high quality copolyester - BPA free

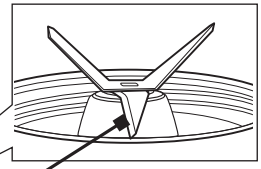

Blade

Blade Unit

The blade is attached to the blade unit

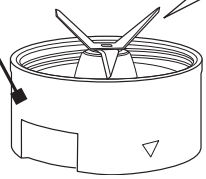

⚠ CAUTION

Handle the blades with extreme care.

Motor Base

Plug

Mains Cord

** Plug shape could be different depending on local specifications

Suction Feet

Minimize vibration in blending

Lid

For fastening the bottle.

Rod

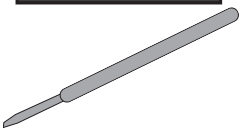

For fixing the seals of the blade unit and lid.

Blade Unit Seal (Gray)

Lid Unit Seal (Black)

** Note the differences in seal colors and sizes

** Manufacturer has already had them in best position in production.

Drive Couplers

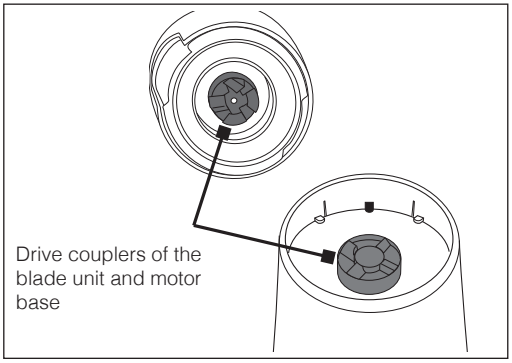

Drive couplers of the blade unit and motor base

NOTE

The Drive Couplers are made of rubber and could be slightly worn with black powder during daily usage. This is not a product damage.

If the bottle is not set up properly on the motor base during use, or blending abnormal amount of food, the drive couplers could be worn out quickly. If this happens, please contact the local service provider.

Using the Blender

BEFORE USE

Use the rod to fix the seal on the blade unit as shown on the picture.

Not fixing the seal properly could result in leakage of ingredients and thus product damage.

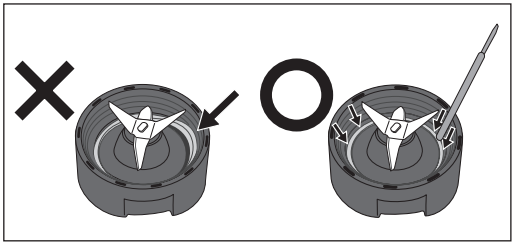

PROCEDURES

1 Prepare ingredients according to recipe.

Follow the below orders:

1. Ice cubes
2. Ingredients with little water content.
   e.g. apples, carrots, bananas.
3. Green vegetables
4. Ingredients with more water content.
   e.g. grapes, oranges.
5. Liquid

Ingredients are suggested to cut into biggest 2cm.

2 Turn and fasten the blade unit into the bottle.

⚠ CAUTION

- **Make sure the blade unit is locked into the bottle properly.**
- **Blend only when assembled properly.**
- **Do not put in hot ingredients (< 50°C. Cooling to room temperature is recommended.**
- **Never exceed the maximum mark of the bottle (280ml)**
- **Do not use prohibited ingredients.**

** If the ingredient is too big and stuck. Please remove and cut into smaller pieces.

Using the Blender

3 Place the motor base on a flat surface where the suction feet could firmly attach.

4 Turn the bottle upside down.

** If the blade unit is not securely fastened, the ingredients could leak.

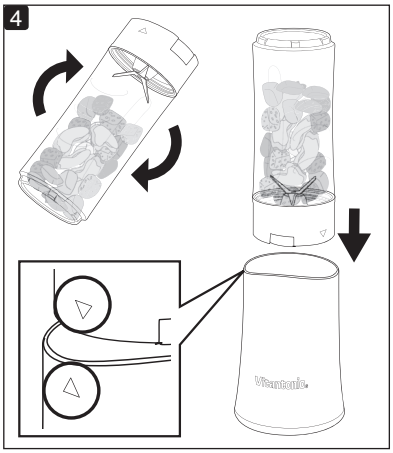

5 Plug in the mains socket (220-240V only).

6 Press the bottle from the top to blend.

PULSE: press for 1 second then stop.
CONTINUOUS: long press the bottle.

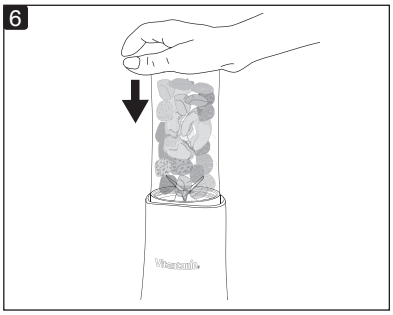

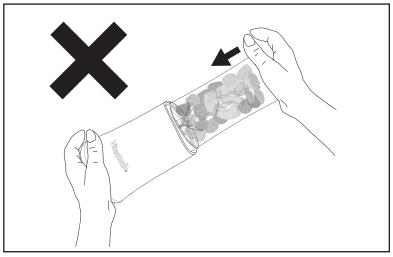

> **⚠ CAUTION**
>
> - **Continuous blending for prolonged period (>1 min) is not recommended.**
> - **Do not move the motor base in the process. Make sure the suction feet are attached on the surface.**
> - **Do not tilt the bottle during blending.**

** Recommended to blend by doing PULSE actions several times for best result.

** If the ingredient is stuck at the top of the bottle, lift up the bottle and shake to mix the ingredients.

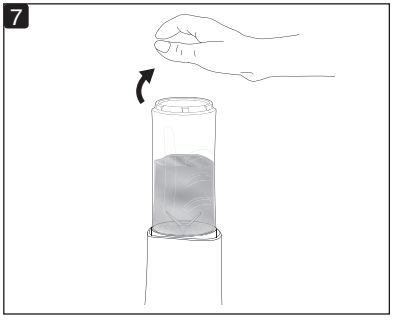

7 Stop blending by stop pressing the bottle.

Using the Blender

8 Lift up the bottle and turn it upside down. Loosen the blade unit.

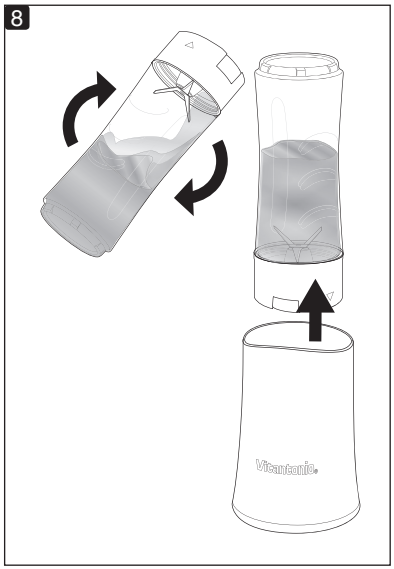

⚠ CAUTION

- **Lift up the bottle only when the motor rotation has stopped. The blade could continue the motion for a few seconds even when the motor base stopped.**
- **Do not touch the blade with bare hands. Put the blade unit into a safe place.**
- **Unplug from power supply after use.**

Fasten the lid into the bottle for storage or drinking on the go.

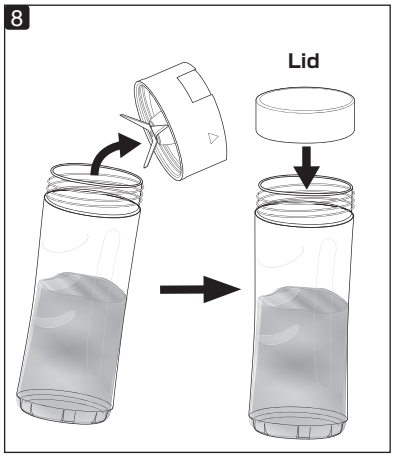

Before Cleaning the Mini Bottle Blender

- Unplug from the mains before cleaning.
- Handle the blades with exteme care as the sharp blades could cut your fingers.
- Never immerse the motor base into water or clean under running water.
- Use soft damp clothes with mild detergents to clean the motor base. Do not use bleach, or strong chemical detergents.

MOTOR BASE

Clean the motor base with damp cloth. Apply some mild detergents for some dirts difficult to clean.

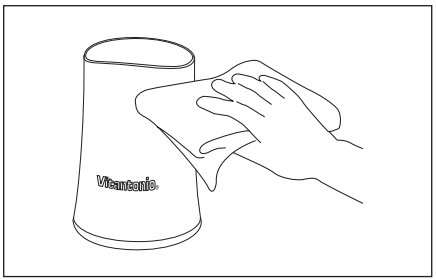

BLADE UNIT

Loosen the blade unit and shower it with water.
(Refer to P.11)

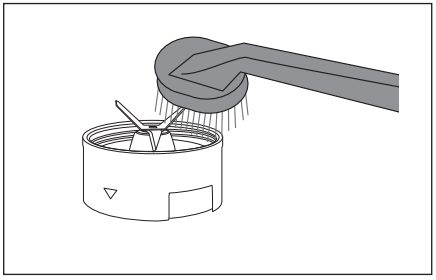

BOTTLE, LID, ROD, SEALS

Immerse the parts into clear warm water, then clean with a sponge with mild detergent.

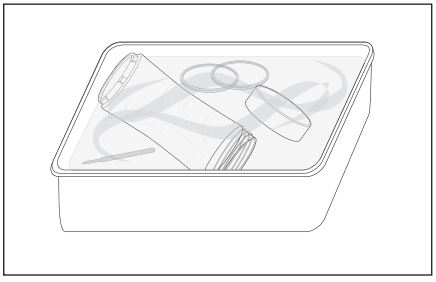

Care and Cleaning

You are recommended to fix the seals after each usage of the appliance.

THE SEAL ON BLADE UNIT

1 Point to the small hole under the blade unit with a rod.

2 Take out the seal with the rod as shown in the picture.

Install the seal by using the rod to fix it into the blade unit.

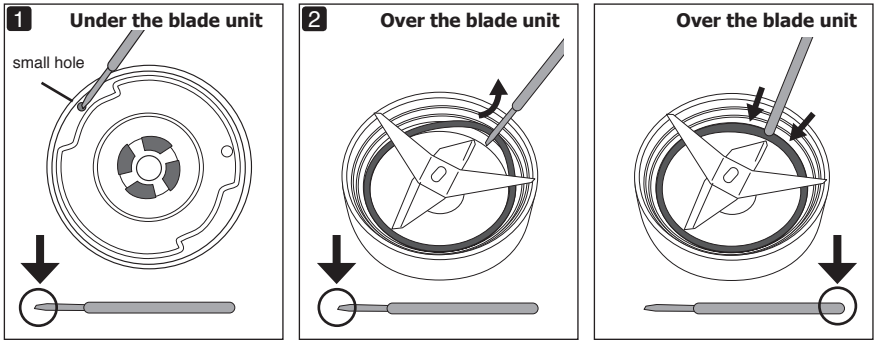

⚠ CAUTION

Handle the blades with extreme care as it is very sharp.

THE SEAL ON BOTTLE LID

1 Using the rod to point to the space between the seal and the lid.

2 Move the rod to take out the seal.

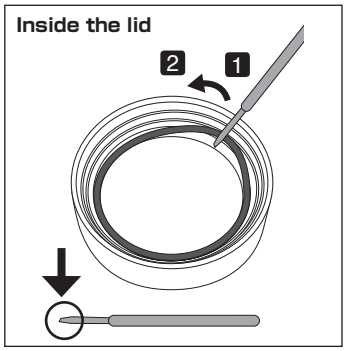

⚠ CAUTION

Please make sure the seal is properly installed to avoid leakage.

Troubleshooting

Before Sending the Blender for Service...

Problem	Cause	Solutions
The appliance is not working when pressing the bottle.	The plug is not properly connected to socket.	Connect the appliance to a mains socket with correct 220-240v voltage
The blades do not turn smoothly.	The ingredients are too big or too hard.	Reduce the size of ingredients.
	The blade unit is not fastened properly.	Fasten the blade unit properly. ** If the blade unit was not properly fastened, the blades would not turn.
Ingredients are stuck but blades are still turning. ↓ Unplug from the mains to stop the appliance.	The ingredients are stuck at the side of bottle and not falling to the blades.	Lift up the bottle and shake to mix the ingredients.
	The ingredients separated into two halves after blending.	Lift up the bottle and shake to mix the ingredients.
	Too little ingredients	Increase quantity of ingredients.
	Too much ingredients	Press and pulse (1 sec) several times to mix the ingredients.
Blades stopped turning or becomes very slow. ↓ Unplug from the mains to stop the appliance.	Ingredients are too big.	Cut the ingredients smaller.
	The bottle is not properly sitting on the motor base.	Make sure it sits vertically and properly to the motor base.
	Food is stuck between the blades and blade unit.	Stop the appliance and remove the food.
	The blade unit is damaged.	Please contact the local distributor for service.
Protective device activated and the blender stopped. ↓ Unplug from the mains. Wait for 30 min then restart.	Too much ingredients.	Reduce ingredient quantity.
	Used the ingredients that is not allowed (as detailed on P.4)	When the ingredients is sticky, too little water, too hard or other banned substances, this could cause abnormal operation.
	Ingredients too hard and blocked the blades from turning.	Take out the stuck ingredients.
The ingredients leaked from the blade unit.	The blade unit is not fastened properly.	Fasten the blade unit.
	Too much ingredients.	Reduce ingredient quantity.
	The lid was not fastened properly.	Fasten the lid.
Abnormal smells coming out from the motor base	Have blended continuously for too long.	The smell is from the motor where the oil is evaporated under the heat generated by prolonged usage. Stop the appliance and cool it down for 30 minutes.

Note: Warranty does NOT cover the consumable parts (e.g. blade unit, bottle, lids). Even within warranty period if the consumable parts are damaged, you will be asked to purchase the parts from local distributors or service centers.

Warranty Services

1. Warranty Registration Card

All products come with a warranty registration card in the final page of the user manual and it detailed the registration procedures.

2. Within Warranty Period

Warranty period is one year counting from the date of purchase. You will need to present (i) the warranty card (exempted if registered online) and (ii) purchase receipt when requesting for warranty services. If it is lost please contact your dealer to obtain the proof of purchase.

3. After Warranty Period Expired

If the warranty period is expired you may still contact the local distributor or service agent for assistance. However a certain fee could be involved for initial checks, repairing services, and parts if the appliance can be repaired.

4. Other Product Questions

Please contact the local distributors as detailed below.

香港澳門代理 Hong Kong & Macau Distributor

Ace Kitchen Limited
Room E1, 14/F, High Win Fty Bldg, 47 Hoi Yuen Road,
Kwun Tong, Hong Kong

一級廚具有限公司
香港觀塘開源道 47 號凱源工業大廈 14 樓 E1 室。

Email: info@acehomehk.com
Tel: +852 3568 7885
Fax: +852 8167 1055
Website: www.acehomehk.com

Please make sure you make an appointment with us before bringing in the appliance for service.

Find us on
www.facebook.com/vitantoniohk

Terms and Conditions

1. If you have followed the instructions on this user manual but still have problem in using the appliance, please contact the local distributors accordingly.

2. Please register your appliance online within 7 days after purchase, or you may register by fax or email by following the procedures at the final page of the user manual.

3. You must retain the purchase receipt as proof of purchase when requesting for warranty service.

4. Warranty covers the purchases in Hong Kong and Macau only.

5. Warranty is one year, counting from the purchase date as shown on the purchase receipt from authorized dealers.

6. Customers are required to bring in the appliance to service center for service.

7. The warranty is VOID if the product is damaged under the below circumstances:

a. not used properly and did not follow the guidelines in this user manual.

b. found to have been dismantled without prior authorization.

c. damaged due to misuse or negligence.

d. damaged due to force majeure like earthquake, thunder, flood, war.

e. used for commercial purpose or under anbnormal hosuehold use situations.

f. improper care, like never cleaning the product.

g. do not revise this user manual

h. warranty does not cover consumable parts

Specifications

Model: VBL-3
Product Description: Vitantonio Mini Bottle Blender

Voltage	AC 220-240V, 50Hz/60Hz
Power	150 W
Weight	570g** not including the lid
Volume	280ml
Dimensions	76 mm(w) × 76mm (d) × 257mm (h) ** not including the lid
Cord Length	0.8m (effective length)
Country of Origin	China
Accessories	Lid x 1

Ace Warranty Registration

Thank you for your purchase. This appliance is entitled for one-year carry-in warranty** after registering your product within 7 days of purchase. You are welcome to register in either of the below methods. If you have any questions please email us at info@acehomehk.com or call us at +852 35687885.

** bound by the terms stated on this user manual
please make an appointment in advance,

Method 1: Online Registration

1) Use your mobile to scan the QR code; or,
2) Enter http://warranty.acehomehk.com

Follow the instructions online.

Method 2: Email or Fax

Fill in the below registration sheet, then send the image or the same information to us by email or fax:

1) Fax: +852 8167 1055
2) Email: info@acehomehk.com

產品型號 Model Number	☐ VBL-3-CC Vitantonio Mini Blender (Coconut White) ☐ VBL-3-LM Vitantonio Mini Blender (Lime Green) ☐ VBL-3-RB Vitantonio Mini Blender (Raspberry Red)

姓名
Name

聯絡電話
Contact Tel

電郵地址
Email

購買商戶
Dealer

購買單號
Receipt No.

購買日期
Purchase Date

必須保留單據並在提請保修時出示。 Keep and present the purchase receipt on warranty requests.

產品意見
Comments